


TDiS

Linear threshold Drainage System

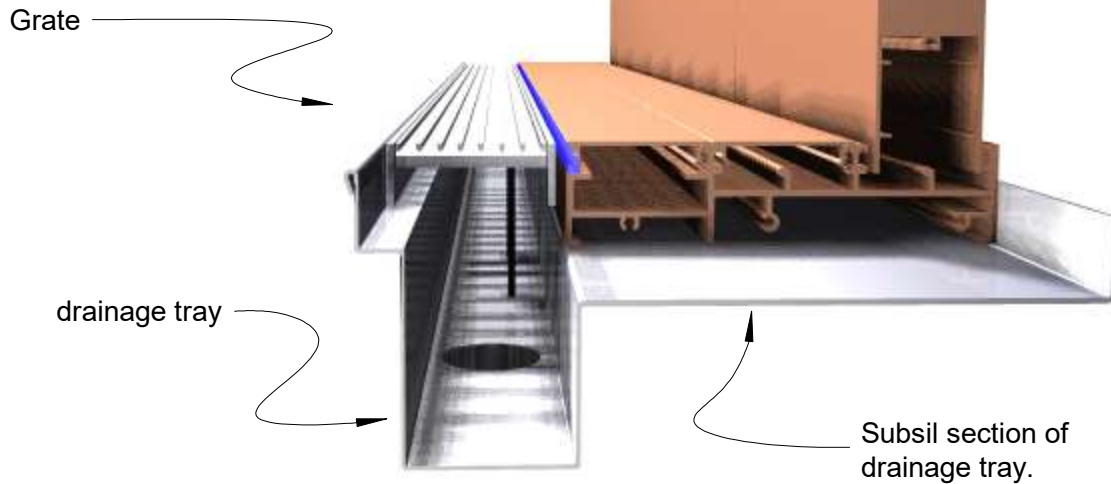

For 65 and 100 TDiS



- * The entire door track and TDiS are set in above and separate to waterproofing. Therefore waterproofing must be completed first.
- * The included sub-sil tray must be installed first as the door tracks are installed into tray of the TDiS.
- * Refer to;
NCC Volumes 1 & 2
AS1428 Design for Access and Mobility
AS4654 for waterproofing

